

STORM DOOR & WINDOW SCREEN FRAMING "KD" KIT

INSTRUCTIONS

Measure width and height of opening -- deduct 1/1/2" from over all measurement for actual size
EXAMPLE= 24 X 24 actual - cut screen frame at 22 1/2 X 22 1/2 put corner in and assemble

MEASURE TWICE CUT ONCE

STORM DOOR and WINDOW SCREEN FRAMING KITS


PACKAGE INCLUDES:

- 4 - Pcs. Framing
- 4 - Corner Keys
- Screen Spline
- Screen Cloth

- Hacksaw
- Metal File
- Spline Rolling tool
- Window/Screen Clips
(If Necessary)

CUTTING & ASSEMBLING

With a hacksaw, cut framing sections straight across at a 90° angle. After cutting, smooth ends with a file.

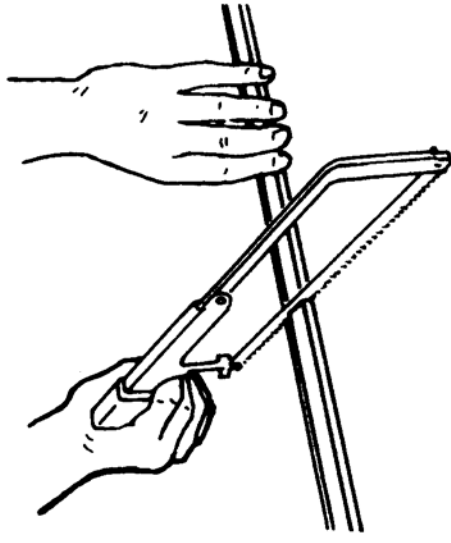

Using the enclosed corner locks and the four framing sections, you are now ready to assemble and screen.

DO-IT YOURSELF!

1 - 2 - 3!

- Measure
- Cut & Assemble
- Install

NO MITRES REQUIRED!!